



ASSEMBLY INSTRUCTIONS:

5. **Hang the end panel:** remove the remaining adhesive film from the hanging blocks and bottom spacers. Align the end panel frame with the BBQ end module and carefully hang it onto the blocks. Be cautious during alignment, as the adhesive on the blocks will make repositioning difficult once they touch the panel.

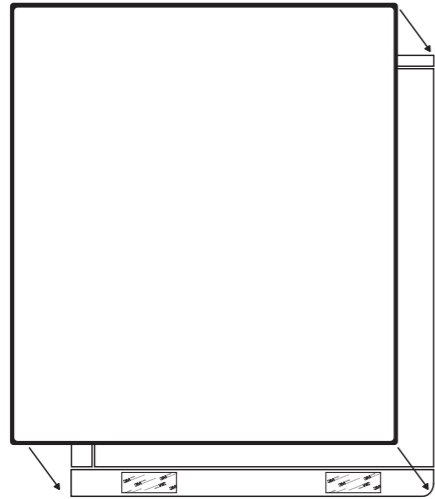

6. **Secure the panel:** press the end panel frame firmly against the cabinet or fridge module, especially where the adhesive blocks are located. Use masking tape to secure the End Panel for 24 hours.

Allow adhesion time: Let the adhesive set for 24 hours for optimal strength before removing the tapes.



For any queries or assistance call



Customer Service
(Australia Only)

1300 174 876

Hours of operation:
Monday to Friday 8am - 5pm EST

Gasmate

Gasmate

OUTDOOR KITCHEN COMPACT LAMINATE END PANELS

SUITABLE FOR GALAXY & NOVA SERIES*

Model No. BA3514



***Suitable to be attached to all Galaxy, Galaxy Gen2 and Nova series modules.
(Not suitable to be attached directly to Galaxy, Galaxy Gen2 and Nova series BBQs).**

IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE USE.

Gasmate® is a registered trademark of Sitro Group Australia Pty Ltd
www.gasmate.com.au Aber Living, N.Z. www.gasmate.co.nz

CONTENT LIST:

1 x Height template card



4 x Adhesive hanging blocks



8 x Self-tapping screws



4 x Adhesive bottom spacers




2 x End panels




ASSEMBLY INSTRUCTIONS:

1. **Position the template card:** place the height template card at the top corner of your BBQ end module, ensuring it aligns with the front of the module. Make sure the fold line of the card sits snugly against the benchtop, as this determines the height of the hanging blocks and the end panel.

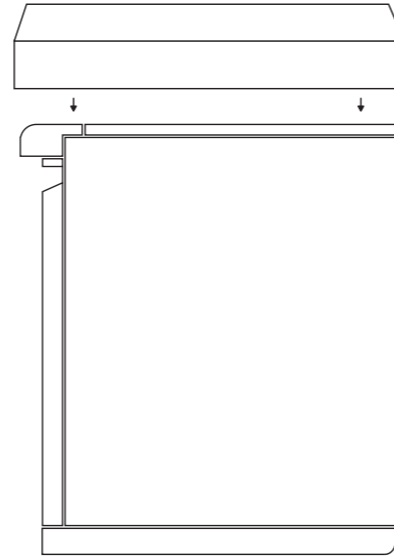

2. **Place the hanging blocks:** position the hanging blocks approximately 100mm and 500mm from the front of the module, as illustrated in the image.

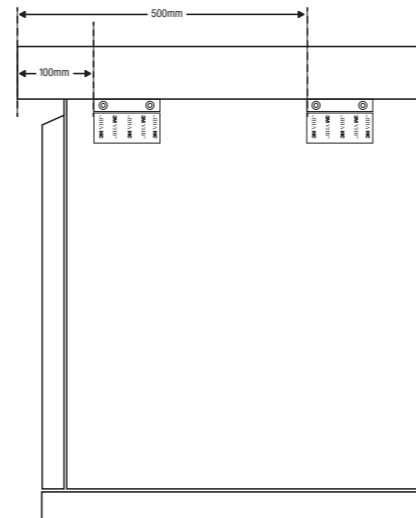

ASSEMBLY INSTRUCTIONS:

3. **Attach the hanging blocks:** peel off the thin adhesive film (not the thicker tape) from the back of the hanging blocks. Press the blocks firmly in place, then drive the provided self-tapping screws through the holes. Ensure the screw heads are flush with the surface of the blocks.



Thin adhesive tape side
This side to be attached to the BBQ module




Thick adhesive tape side
This side is to be used to attach to the End Panel

PLEASE NOTE:

Clean the areas where the hanging blocks and bottom spacers will be placed using methylated spirit.

4. **Add the bottom spacers:** stick the adhesive bottom spacers in suitable locations where they can support the lower end of the end panel frame.

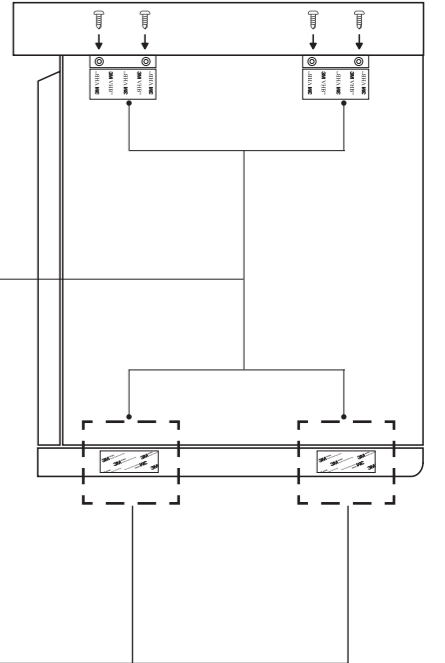

For the Fridge Module, cut the adhesive bottom spacer in half to create four pieces. Stack two of these pieces together. This will provide the correct distance.